

WATER COOLER

OPTIMAL CLIMATE CONTROL **INSTALLATION MANUAL**



INSTALLATION & USER GUIDE

Engineered & Designed in Holland

www.opticlimate.com



PLEASE READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THE UNIT:

- High Temperature Safeguard on **page 7**
- Delete alarm history on **page 12**
- Dehumidify without cooling pro4 on **page 12**

**THE FUTURE OF COOLING
JUST GOT COOLER.**

INSTALLATION

One or multiple water cooled Opticlimates can be connected to one water cooler. The water cooler is a super efficient way to recirculate water or a glycol-mix in a closed loop system. The fan(s) and the circulation-pump are the only parts that consume energy. The water cooler makes it possible to prepare water for the Opticlimates at outside temperatures over 40°C.

Setting up the system starts with a good design of the system. Pump-size, piping diameter and layout are the most important items when designing the system.

The pump:

The circulator pump must supply a pre defined flow at a given pressure. The flow is determined by the energy that must be circulated (KW) and the pressure depends on the pressure-drop of the complete system (Opticlimates) + piping + water-cooler) We always calculate the correct pump for your setup.

We suggest to place the pump indoor.

The piping:

We suggest to use PE-piping with quick connectors. Prevent knees or other fittings that reduce water-flow. We supply all the fittings for PE piping in the package. Supplying the piping is also possible.

The water cooler:

The stock water coolers come as Industrial heavy duty and Ultra light /compact. The stock versions are all vertical models (roof/floor or wall mount). Both models can also be ordered as a horizontal model (roof /floor mount)

The fittings:

Supplied fittings are for PE piping applications. We supply automatic bleeders, air separators, ball valves, treated fittings depending on your setup.

The Fan/pump control:


Fan and pump control are supplied as an option. The Fan/pump control comes as a set of different parts.

- Temperature sensor for water temperature
- Startsensor (current clamp) to determine if compressor is on or off
- Fan/pump controller (the brain)
- Fan/pump box (connects to fan and pump)

The Fan/pump control makes the system even more efficient. The fan speed of the water cooler is regulated depending on water temperature and the pump will only run when there is a need for cooling. When the system is not in use, the pump will run a pre-defined cycle to prevent freezing in colder climates. In cold climates a 20% or more glycol mix is recommended to prevent freezing.

INSTALLATION

SETTING UP ONE OPTICLIMATE ON ONE WATER-COOLER

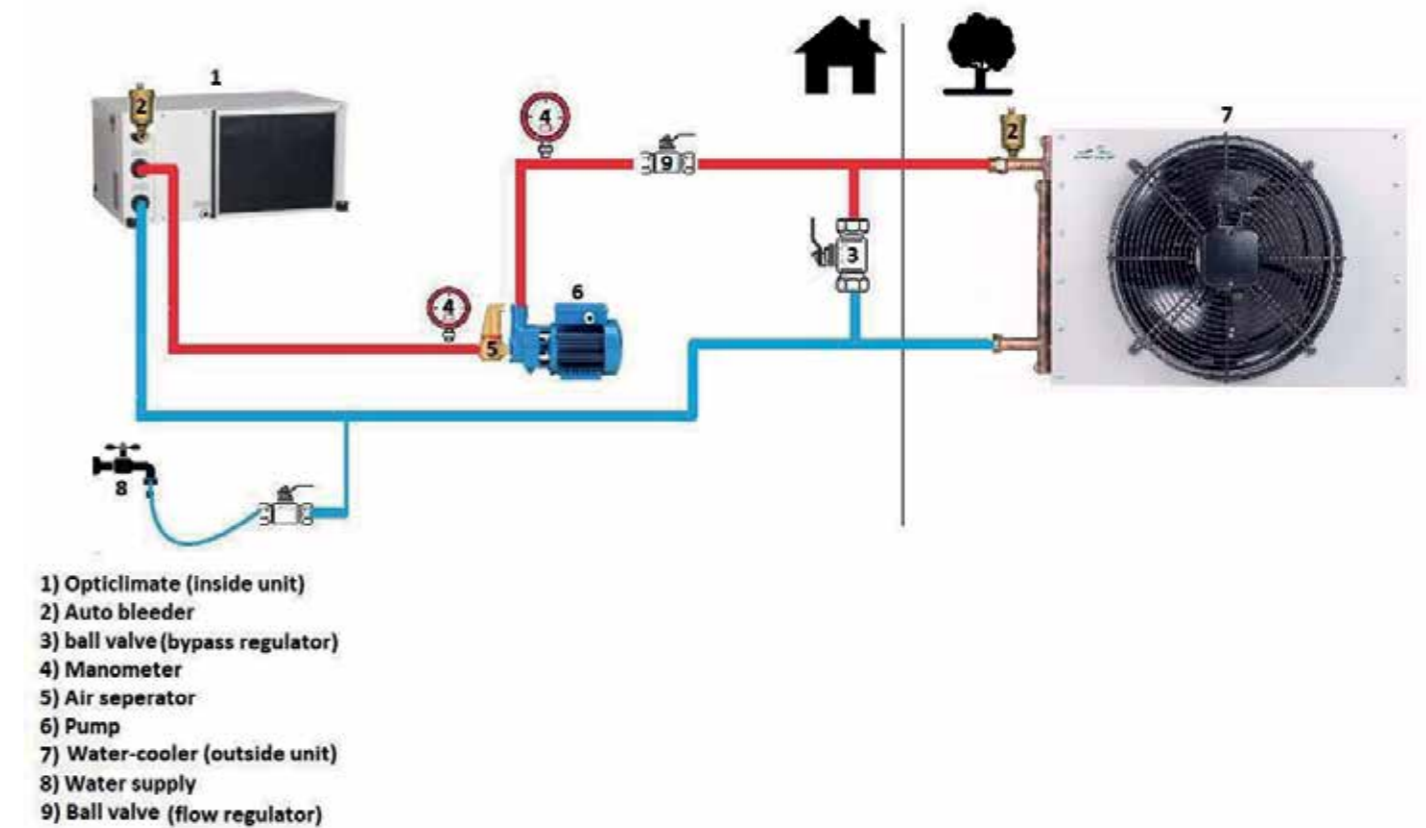


The system is filled with water or glycol mix. The water supply (8) must be located at the lowest point of the system. Automatic bleeders (2) must be located at the highest point of the system. A manometer (4) is positioned on the both the return and supply side of the pump. The air separator (5) must be located at a location where the pressure in a running system is the lowest. (pump intake)

The set contains 2 ball valves, one to regulate flow (9) and one for the by-pass (3) Air in the system reduces capacity and can damage pump or heat exchangers. Make sure air is bled from the system after filling. Power the pump for a few seconds to bring air to the highest point in the system. After bleeding, let the pump run full power, the air separator will remove any air bubbles that remain in the system. This can take a few minutes, hours or even days depending on the layout of the piping.

INSTALLATION

SETTING UP MULTIPLE OPTICLIMATES ON ONE WATER-COOLER

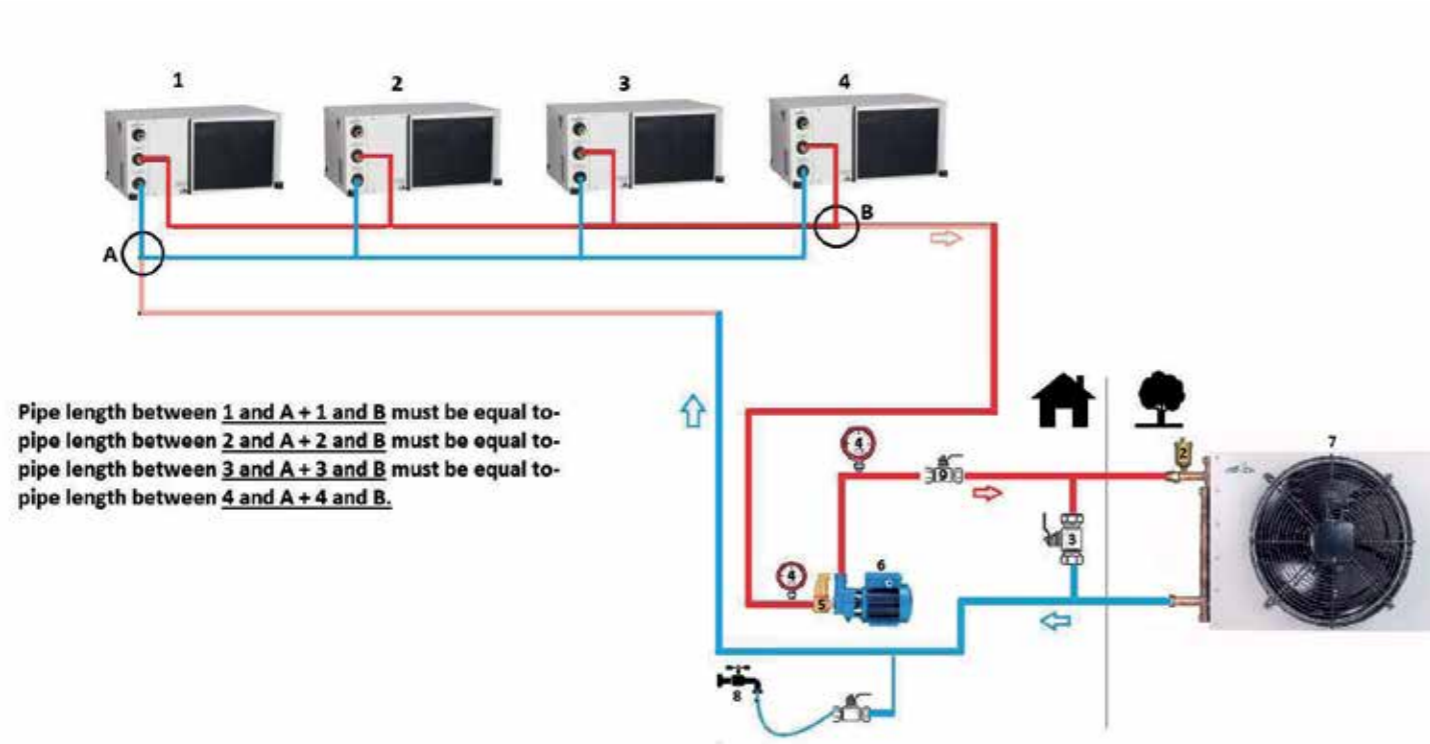

When connecting more than one Opticlimate to one water cooler, it's important that pipe resistance (return and supply) for each Opticlimate is the same to prevent uneven water distribution between the Opticlimate.


The setup of the water cooler and pump etc. is the same as described in the chapter Setting up one Opticlimate on one water-cooler.

The layout of the piping from and to the Opticlimate must be well designed. It's best to consult us using a drawing or sketch of the situation on the Design sheet below.

INSTALLATION


SETTING UP MANUAL FAN/PUMP CONTROL

The most simple and cheap way of fan and pump control is to power the pump always and connecting the fan of the water cooler to connection N and 7 inside the electric compartment of the Opticlimate.

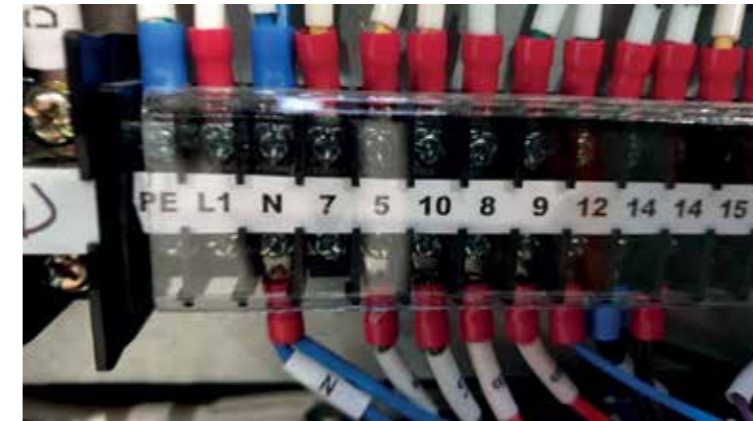

The flow in this setup must be manually adjusted with a valve in the piping between pump and water cooler. The flow needs a periodic adjustment depending on outside temperatures. ΔT between water-in and water-out of the Opticlimate needs to be 5K. More flow lowers ΔT , less flow increases ΔT .

SETTING UP FULLY AUTOMATIC CONTROLLED FAN/PUMP CONTROL

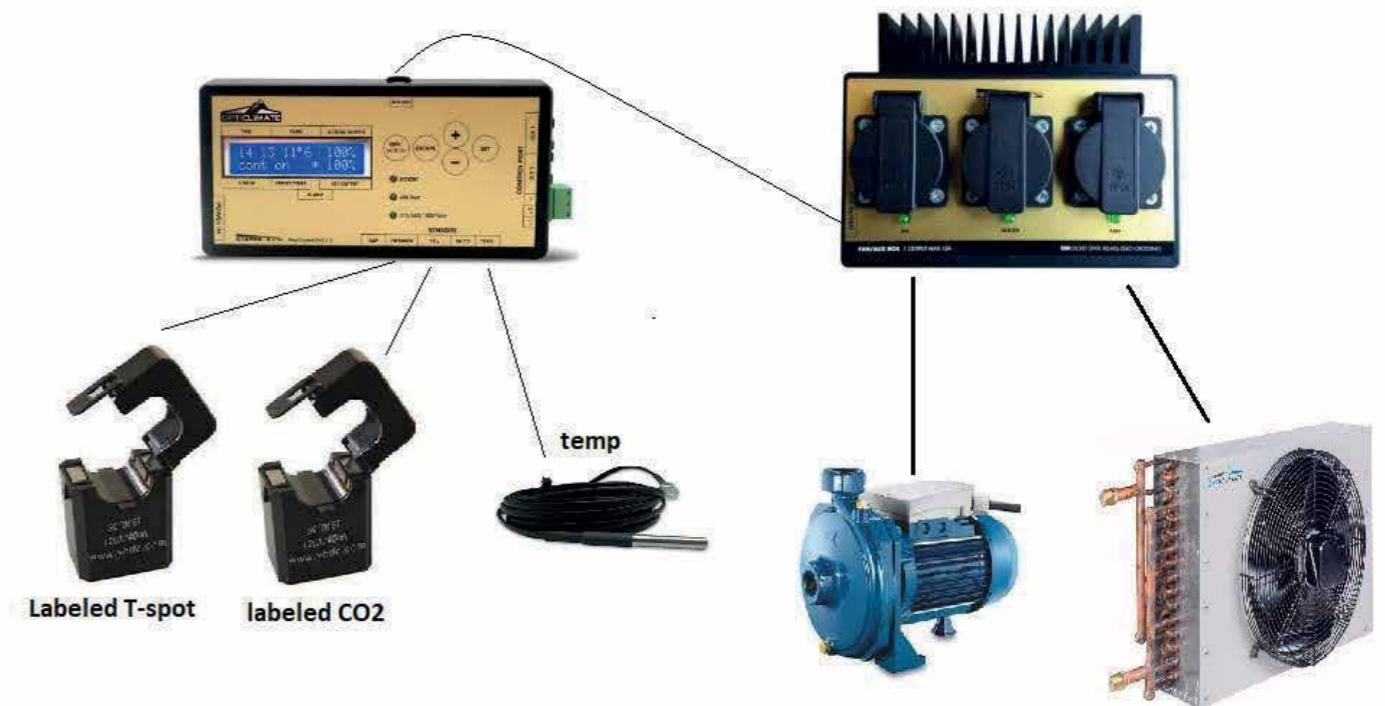

A maxi-controller evo in combination with a fan-pump controller (Smart Box) is used to control pump on/off and fanspeed. The controller receives 2 signals from 2 sensors: temperature sensor to determine water temperature in the system and a current transformer to determine if the compressor inside the opticlimate is on or off.

INSTALLATION

Connecting the current transformer:



On/off model Opticlimat



Inverter model Opticlimat

When using an on/off model Opticlimat, find the cable that powers the compressor coming from relays KM1. Cable code U, V or W.

When using an inverter model Opticlimat, find the cable that powers the inverter PCB or compressor. The current clamp can be opened to clamp around the cable. Plug the other end into the controller. The cable is labeled CO2 or T-spot. A current transformer labeled CO2 must be connected to the controller CO2 port. A current transformer labeled T-spot must be connected to the INFRARED port of the controller.


Connecting the water temperature sensor:



Move isolation back as far as possible



Place sensor on copper pipe

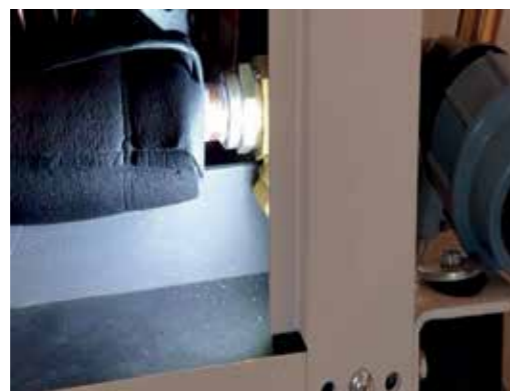

Move the isolation sleeve back to cover the sensor and route the cable to the controller.

Plug the cable into the controller on the TEMP port.

INSTALLATION

Connecting the fan-pump controller (Smart Box):



Use the supplied communication-cable to connect the controllers AUX connection on top with the fan-pump controller (Smart Box) AUX-IN connection on the left side. The power outlet marked FAN on the fan-pump controller (Smart Box) must be connected to the fan of the water cooler and the pump must be connected to the outlet marked RH. The settings on the controller are pre-set. Do not change them without consultation. Power both the controller and fan-pump controller (Smart Box). The fan and pump go on for a few seconds, this is normal a first startup.

Deter-men ΔT and adjusting

The design ΔT of the the system is 5K. This means that the temperature difference between the water-inlet and outlet of the Opticlimat must be maintained at 5K. To deter-men this value press the S-key short on the remote of the Opticlimat. In the display appears C-01 and a temperature. Using the up-and down keys you can scroll from C-01 up to C-06. To determent ΔT subtract the temperature value C02 from C03.

Example: C02= 45°C
C03= 39°C -
 $\Delta T= 6^{\circ}K$

C02 - Water-out temperature (supply to water cooler)
C03 - Water-in temperature (return from water cooler)



INSTALLATION

Balancing with manual or auto by-pass

Adding glycol to the system

In an environment where glycol (antifreeze) in case of a leak could come in contact with food, chemicals or in a pharmaceutical or agriculture plant, propylene glycol must be used. We recommend to use a 20% glycol / water mix. (antifreeze protection -10°C) or more depending on outside conditions.

To determine how much glycol must be added, you need to know the total volume of water in the system.

The specification sheets below help to determine how much volume your system contains.

Order nr.	Model	Weight	Dimensions	Sound level	Cooling power	Fan	Volume
1	1-8010	7kg	L650xH410xD320	28dB(A)	0,09kW	1 (350mm)	2l
2	1-8020	13kg	L1200xH410xD320	31dB(A)	0,12kW	2 (350mm)	4l
3	1-8030	53kg	L1625xH933xD600	32dB(A)	0,27kW	1 (500mm)	6l
4	1-8040	19kg	L1750xH410xD320	33dB(A)	0,18kW	3 (350mm)	6l
5	1-8050	70kg	L1625xH933xD600	32dB(A)	0,27kW	1 (500mm)	11l
6	1-8060	26kg	L1200xH810xD320	34dB(A)	0,24kW	2x2 (350mm)	8l
7	1-8070	125kg	L1600xH983xD600	40dB(A)	0,6kW	1 (630mm)	19l
8	1-8071	125kg	L1600xH1050xD943	40dB(A)	0,6kW	1 (630mm)	19l
9	1-8072	52kg	L1750xH810xD320	35dB(A)	0,39kW	3x3 (350mm)	21l

Model	Evaporator volume (m3)	Condenser volume (m3)	Estimated Pipes volume (m3)	Total volume (m3)	Total (Ltr)
3500pro3 (Plate type heat exchanger)	0.000845454	0.0013	0.000304573	0.002450027	2.45
6000pro3 (Plate type heat exchanger)	0.001320571	0.002	0.000316842	0.003637413	3.36
10000pro3 (Plate type heat exchanger)	0.00229044	0.0033	0.000318623	0.005909063	5.90
15000pro3 (Plate type heat exchanger)	0.003271472	0.005	0.000335321	0.008606793	8.60
3500pro3 HC (Plate type heat exchanger)	0.000845454	0.0013	0.000304573	0.002450027	2.45
6000pro3 HC (Plate type heat exchanger)	0.001320571	0.002	0.000316842	0.003637413	3.36
10000pro3 HC (Plate type heat exchanger)	0.00229044	0.0033	0.000318623	0.005909063	5.90
15000pro3 HC (Plate type heat exchanger)	0.003271472	0.005	0.000335321	0.008606793	8.60

1 meter of 25mm PE piping has a volume of 0,35ltr

1 meter of 32mm PE piping has a volume of 0,60ltr

INSTALLATION

Example:

A 15000pro3 high capacity (HC) on 1 x 17KW and a total pipe length of 100mtr x 32mm = 8.6 ltr + 11 ltr + (100x 0.6ltr=60ltr) = 79.6ltr total volume. You need 16ltr of glycol to make a 20% glycol/water mix.

When adding glycol to an empty system, use a pump to add the calculated amount of glycol, then top-up the system with water until the static pressure is 1.5bar.

When adding glycol to system that is already pressurised and full with water, remove more water than the amount of glycol you want to add, add the calculated amount of glycol and top-up with water until the static pressure of the system is 1.5bar.

Note:

-Pure water cools better than a glycol/water mix

-A water glycol mix prevents corrosion

-Use an automotive antifreeze tester and a sample of the glycol/water mix to check the freezingpoint of the mix. Make sure the mix is correct for weather conditions in your area.

INSTALLATION

DESIGN SHEET

Number of Opticlimates on one water cooler _____


Opticlimat model (s) _____ pro3/pro4

Distance between Opticlimates and water cooler _____ mtr

Heat load Opticlimates (KW) _____ KW

Max. outside temperature _____ °C

Min. outside temperature _____ °C

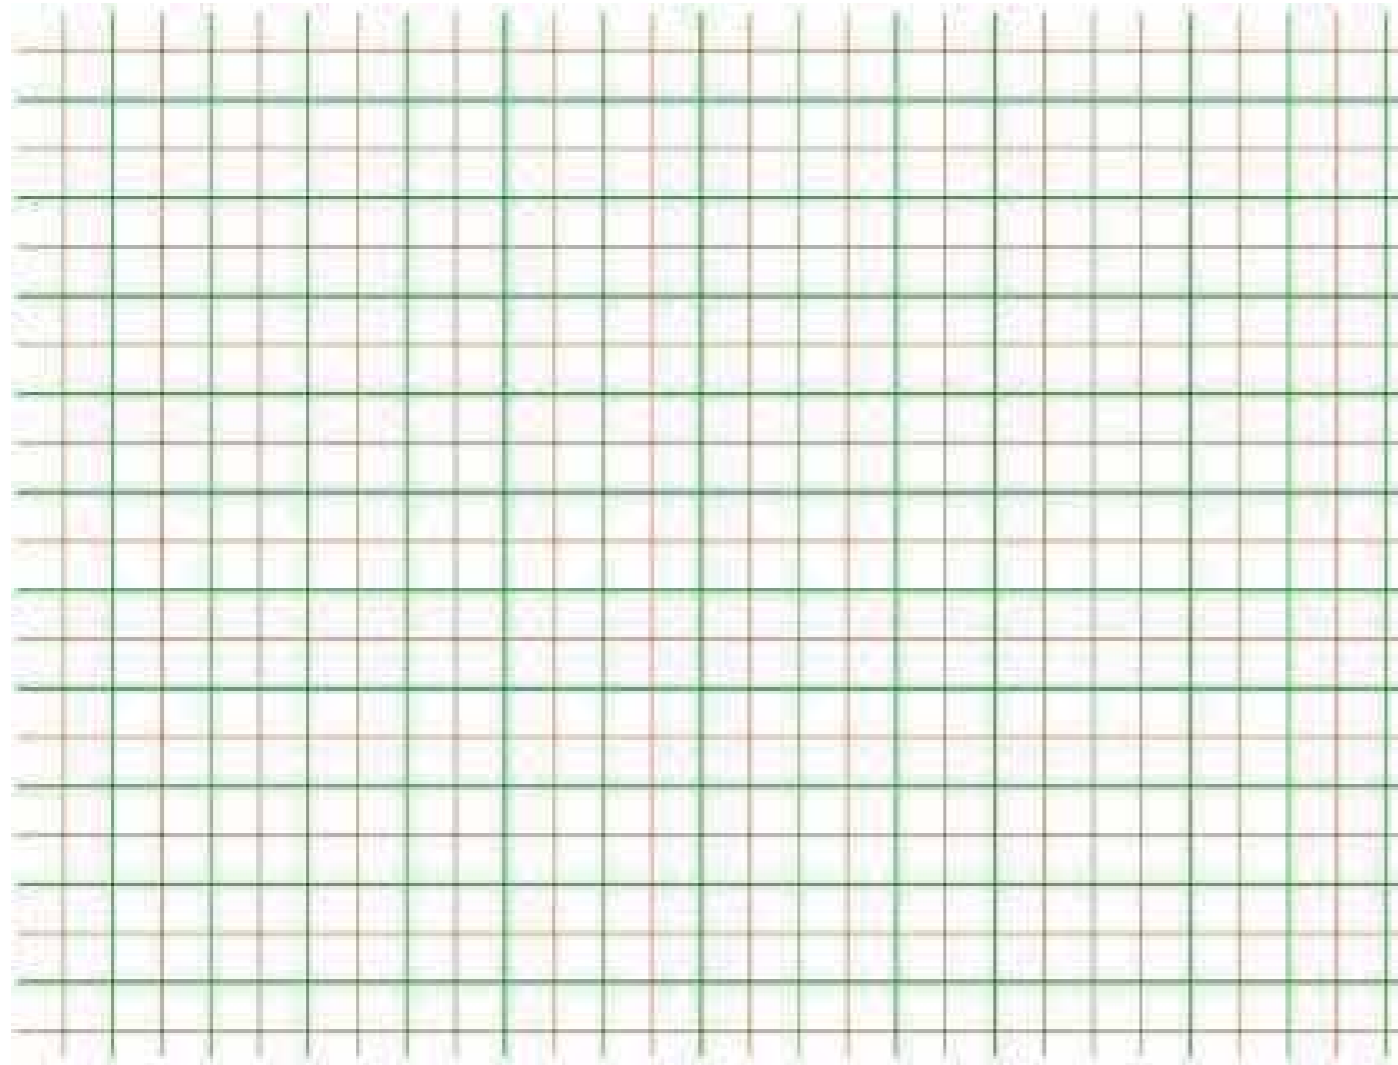

Sketch of the situation

INSTALLATION

WATER COOLER

OPTIMAL CLIMATE CONTROL **INSTALLATION MANUAL**



® Opticlimate is a registered trademark of
airsupplier

INSTALLATION & USER GUIDE

Engineered & Designed in Holland
Manual version 0113 2023

www.opticlimate.com

**THE FUTURE OF COOLING
JUST GOT COOLER.**